

Richiesta Accesso API

Author: Travis Snyder

Fase 1: Il cliente invia un ticket al Centro Servizi Solis.


Fase 2: Il tecnico del supporto tecnico Solis esaminerà la richiesta per verificarne la correttezza e la invierà all'autorità locale per attivare l'accesso all'API.

Fase 3: L'autorità locale attiverà l'accesso API e lo comunicherà al cliente o al tecnico dell'assistenza.


Fasi di attivazione di SolisCloud:

Fase 1: Accedere a www.soliscloud.com e inserire le credenziali.


Fase 2: Fare clic sulla pagina dei servizi per visualizzare l'opzione Gestione API. (Vedere l'immagine qui sotto)

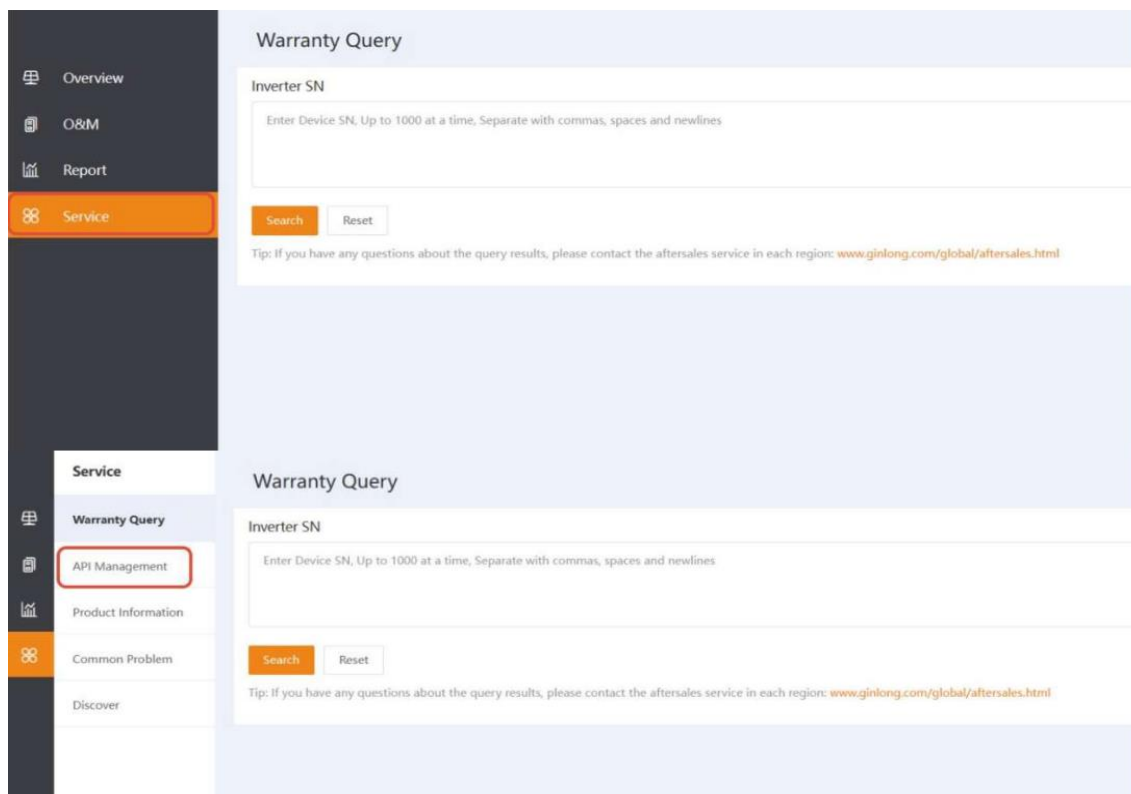


Fase 3: Nell'opzione Gestione API è possibile controllare ID Key e Secret Key dopo aver premuto il pulsante Attiva ora. (Vedere l'immagine qui sotto)

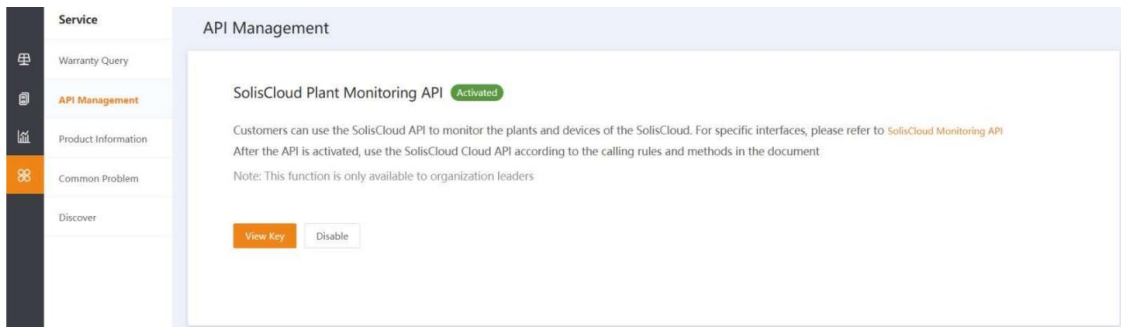

Fase 4: premere prima il "Codice di verifica" e poi apparirà un puzzle. Risolvete il puzzle e il codice di verifica verrà inviato alla vostra casella di posta elettronica. Inseritelo nella casella del codice di di verifica in Soliscloud e confermare.

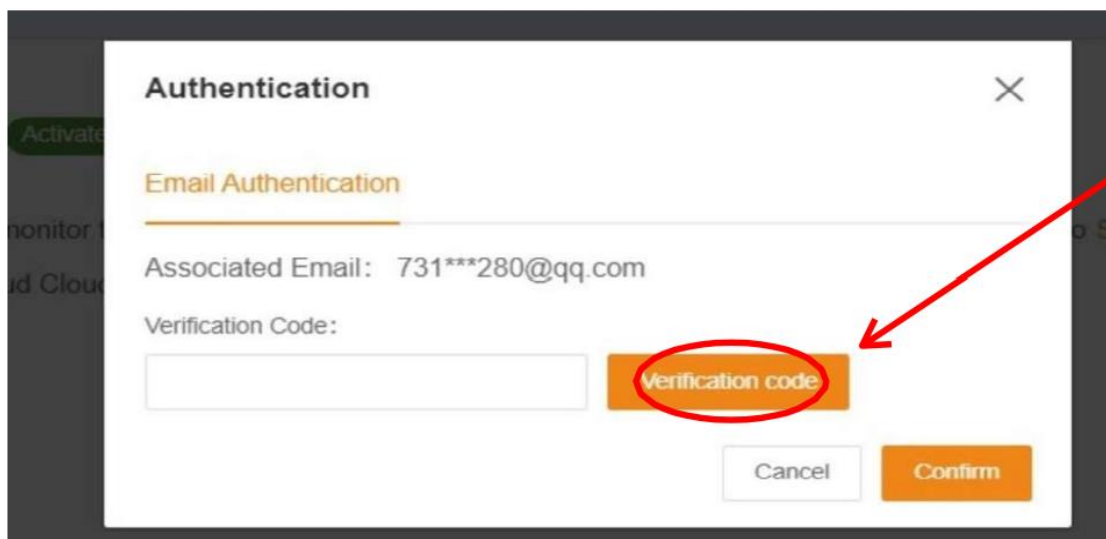

Fase 5: Verifica dell'ID API e del Codice Segreto API:

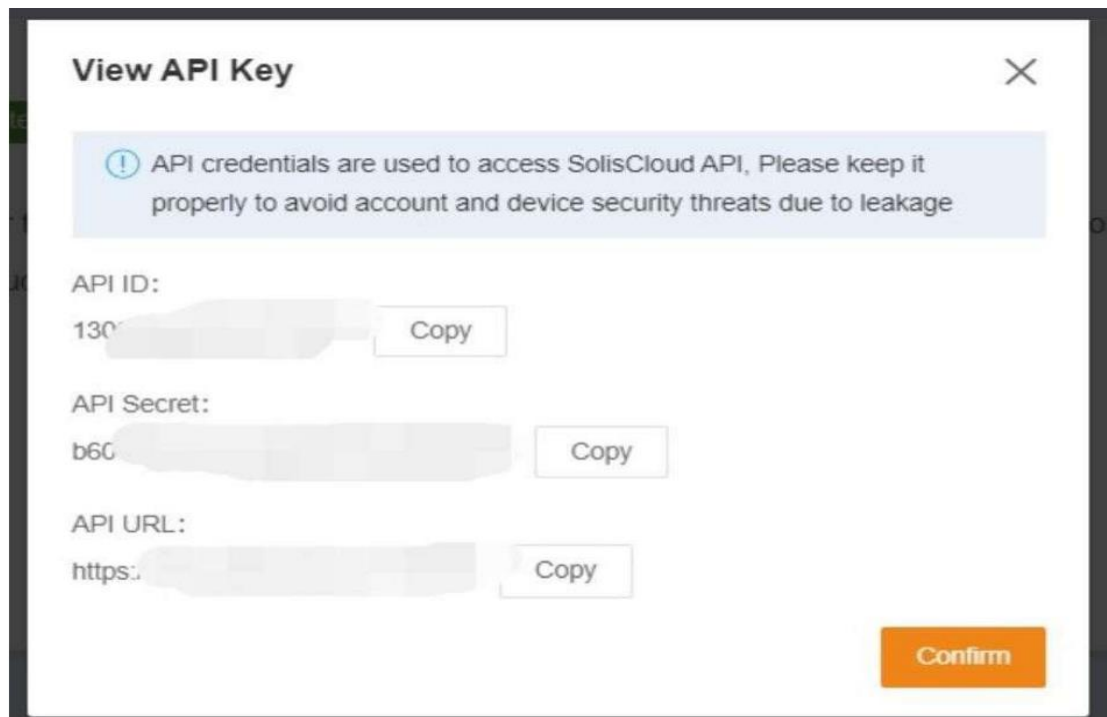

*Nota Gli utenti possono consultare il documento API nella parte gialla sottostante.

API Management

SolisCloud Plant Monitoring API Activated

Customers can use the SolisCloud API to monitor the plants and devices of the SolisCloud. For specific interfaces, please refer to [Soliscloud Monitoring API](#). After the API is activated, use the SolisCloud Cloud API according to the calling rules and methods in the document.

[View Key](#)

[Disable](#)